

## Canon ixus 960 digital camera manual

---



**File Name:** Canon ixus 960 digital camera manual.pdf

**Size:** 4719 KB

**Type:** PDF, ePub, eBook

**Category:** Book

**Uploaded:** 6 May 2019, 21:34 PM

**Rating:** 4.6/5 from 776 votes.

## Download Now!

Please check the box below to proceed.



I'm not a robot



reCAPTCHA  
Privacy - Terms

## Book Descriptions:

# Canon ixus 960 digital camera manual



Refer to them as necessary according to the flowchart below. Contents of This Guide Check the package contents Getting Started p. 7 Explains how to complete tasks ranging from charging batteries and installing memory cards to setting the date and time, shooting, playing and erasing images, and performing simple printing tasks. Please Read Getting Started.7 Preparations. Align these symbols Plug the battery charger CB2LX into a power outlet, or attach the power cord to the battery charger CB 2LXE and plug it into a power outlet. Battery charger model names and types vary by region. Insert the battery. It will lock into place with a click. Insert the memory card until it clicks into place.To Remove the Battery Press the battery lock in the direction of the arrow a and pull the battery out b. To Remove the Memory Card Use a finger to push the memory card in until you hear a click, then release it. Set the date and time as shown in step 3 and 4 in the explanation below. Power Button Button Buttons Button Press the power button. Insert a charged battery into the camera. Or if you use the separately sold AC Adapter Kit ACKDC30, the battery will charge in about four hours. Set the mode dial to Auto. Review Recorded images are displayed on the LCD monitor for approximately 2 seconds immediately after shooting. Shutter Button Button You can also use the following methods to continue displaying the image immediately after shooting so that you can check it. The last recorded image will display.Select a shooting mode. 1. Set the mode dial to Movie. 2. Press the button. 3. Use the button to select Standard. 4. Use the button to display a movie and press the button. Images with a icon are movies.Use the button to select an image to erase and press the button. Please note that erased images cannot be recovered. Exercise adequate caution before erasing an image. Follow the onscreen messages to proceed with the installation.

CameraWindow will

display.<http://am-assets.com/aom/magnolia/userfiles/dri-steem-humidifier-manual.xml>

- **canon ixus 960 digital camera manual, canon ixus 960 digital camera manual download, canon ixus 960 digital camera manual pdf, canon ixus 960 digital camera manual review, canon ixus 960 digital camera manual instructions.**



Preparations for downloading images are now finished. Please proceed to the Downloading Images Using the Camera section p. Preparations for downloading images are now finished. Use this method to download images using camera operations except Windows 2000. Button Button Buttons. You will return to the Direct Transfer menu. Only JPEG images can be downloaded as wallpaper for a computer. The option selected with the button is retained even when the cameras power is turned off. Some accessories are not sold in some regions, or may no longer be available. By holding down the touch control dial in the position of the enlarged icon, you can determine the item to set. Please note that some of the options for some functions cannot be operated with it. Operable Functions Reference Page Shooting Selecting a shooting mode p. 44 71, 72, 73, 85, Selecting options in Selecting options in the FUNC. In addition, you can register slideshow or sound recorder functions to the button 172. Power Button Shutter Button Button Turning the Camera Off Shooting Mode Press the power button. Auto Mode Manual Mode Special Scene Mode Movie Mode Auto Mode Auto p. 14 Manual Mode Manual p. 84 Digital Macro p. Shooting Mode Auto Playback Mode You can switch between menus with the button. Press the button. Use the button to switch between menus. Menu Item Page Menu Item Page Manual Mode p. 84 p. 114 My Colors Special Scene Mode p. Startup Image Sets the image displayed when the camera power is turned on. Startup Sound Sets the sound played when the camera power is turned on. A sound file in a format other than the WAVE format is attached or the file format is not recognized. Button Quickbright LCD Function You can set the LCD monitor to the brightest setting regardless of the option selected in the Set up menu by pressing the DISP. Please note that formatting initializing a memory card erases all data, including protected images and other file types. <http://bosuntools.com/UserFiles/files/20200925/1600971161.xml>



When the icon is displayed, sound data recorded with the sound recorder exists. The available shooting characteristics and focal lengths 35mm film equivalent are as follows Selection Focal Length Shooting Characteristics. With the digital zoom, the image area is 14 x 11 mm 0.6 x 0.4 in. at maximum zoom approximately 4.0x. You can set the time delay and the numbers of shots you wish to take in advance. 10 sec. SelfTimer shoots 10 seconds after you press the shutter button. You can

shoot images with the optimal settings for postcards by composing them inside the print area widthtoheight ratio of approximately 32 shown in the LCD monitor. Select the Postcard Mode. You can embed the date in the image data when Postcard is selected. Select the Postcard Mode. 1. Press the button. 2. For details, please see the user guide for each product. Setting the Image Stabilizer Function See Functions Available in Each Shooting Mode 228. Set Auto ISO Shift p. You can shoot with the most appropriate settings for the scene. Select a shooting mode. Indoor Prevents camera shake and maintains the subject's true color when shooting under fluorescent or tungsten lighting. Foliage Shoots trees and leaves—such as new growth, autumn leaves or blossoms—in vivid colors. Underwater Appropriate for shooting images with Waterproof Case WPDC19 sold separately. This mode uses an optimal white balance setting to reduce bluish tones and record images with a natural hue. Allows you to select settings yourself, such as the exposure compensation, white balance or my colors. Select manual mode. 1. Set the mode dial to 2. This function reduces the red appearance of eyes when the flash fires and light is reflected back. You can shoot with the flash at slow shutter speeds. You can limit the extent to which only the background darkens with flash photography while shooting night scenes or under indoor lighting. The following movie modes are available.

Depending on the volume and data writing speed of the memory card, recording may stop before reaching 1 hour or before the recorded data volume has reached 4 GB. Select the number of recording pixels. 1. Press the button. 2. Use the button to select and the button to change the option. Stitch Assist can be used to shoot overlapping images that can later be merged stitched to create one panoramic image on a computer. The overlapping seams of several adjacent images can be joined into a single panoramic image. You can check the focus in recorded images. The AF frame indicates the area of the composition on which the camera focuses. You can set the AF frame in the following ways. You can have the camera automatically detect the Face position of a face and use this data to set the focus Detect. Turn on the LCD monitor. Aim the camera so that an object at the same focal distance as the main subject is centered in the AF frame. You can set the exposure and focus separately. This is effective when the contrast is too strong between the subject and background or when a subject is backlit. You can lock the flash exposure so that the exposure settings are correctly set regardless of the composition of your subject. Turn on the LCD monitor. Press the button and select flash on. Raise the ISO speed to use a fast shutter speed when you wish to reduce the effects of camera shake or avoid blurry subjects, or to turn the flash off when shooting in a dark area. If the camera shake warning icon displays while shooting, you can raise the ISO speed and record at a shutter speed that compensates for camera shake. Adjust the exposure compensation to a positive value to avoid making the subject too dark when it is backlit or shot against a bright background. Adjust the exposure compensation to a negative value to avoid making the subject too bright in night shots or when shot against a dark background. Appropriate for standard shooting conditions, including backlit scenes.



<http://eco-region31.ru/bosch-hbn43m561b-manual>

The camera divides images into several zones for metering. It evaluates complex lighting conditions, such as Evaluative the position of the subject, the brightness, the direct light, and the backlighting, and adjusts the settings to the correct exposure for the main. You can set the shutter speed to a slow setting to make dark subjects appear brighter. Select the Long Shutter Mode. 1. Press the button. Please note that camera shake becomes a factor at low shutter speeds. Shoot with the camera attached to a tripod. Use of the flash may result in an overexposed image. If this occurs, shoot with the flash set to The following are unavailable Exposure Compensation. Normally, the Auto white balance setting selects an optimal white balance. When the setting cannot produce natural looking colors, change the white balance using a setting appropriate for the light source. The correct white balance may not be obtained when the exposure setting is incorrect image appears completely black or white. You can change the look of an image when it is shot. My Colors Off Records normally with this setting. Emphasizes the contrast and color saturation to Vivid record bold colors. You can shoot images with the original colors transformed. This can be performed on movies as well as still images, allowing you to enjoy photographing with image or movie effects. However, depending on the shooting conditions, the images may appear rough or you may not get the expected color. Still Images 1. Set the mode dial to 2. Press the button. 3. Use the button to select and choose with the button. Aim the camera so that the original color appears at the center of the LCD monitor and press the button. The following functions can be registered. Menu Item Page Menu Item Page Not Assigned. You can display vertical and horizontal grid lines, a 32 print area guide, or both on the LCD monitor while shooting to help check the position of your subject.

<http://www.fitbikethailand.com/images/bt-meridian-norstar-manual.pdf>

**JVC**

DVD RECEIVER WITH MONITOR

KW-ADV790  
KW-AVX710

ENGLISH

RECEPTOR DVD CON MONITOR

KW-ADV790  
KW-AVX710

ESPAÑOL

RÉCEPTEUR DVD ET MONITEUR

KW-ADV790  
KW-AVX710

FRANÇAIS

SAT READY

Radio Ready

DivX

DivX ULTRA

DOLBY DIGITAL

DVD VIDEO

dts

DIGITAL OUT

For canceling the display demonstration, see page 8.  
Para cancelar la demostración en pantalla, consulte la página 8.  
Pour annuler la démonstration des affichages, référez-vous à la page 8.

For installation and connections, refer to the separate manual.  
Para la instalación y las conexiones, refiérase al manual separado.  
Pour l'installation et les raccordements, se référer au manuel séparé.

**INSTRUCTIONS**  
MANUAL DE INSTRUCCIONES  
MANUEL D'INSTRUCTIONS

For customer Use:  
Enter below the Model No.  
and Serial No., which are  
located on the top or bottom  
of the cabinet. Retain this  
information for future  
reference.

Model No. \_\_\_\_\_  
Serial No. \_\_\_\_\_

LVT1778-001A  
[J]

Cover\_KW-AVX710J.indd 2

07.11.27 8:20:33 PM

Your camera is equipped with an Intelligent Orientation sensor that detects the orientation of an image shot with the camera held vertically and automatically rotates it to the correct orientation when viewing it in the LCD monitor. It then regulates the optimal white balance, exposure and focus

for vertical photography. The images you shoot are automatically assigned file numbers. You can select how the file number is assigned. A number one higher than the last one recorded is assigned to the next image. Up to 2,000 images can be saved into a single folder. Movie To Return to Single Image Playback Press the zoom lever toward Switching between Sets of Nine Images The jump bar will display if you press the zoom lever toward. Since you can also change the magnification level and switch between images, it is easy to check peoples' expressions and look for closed eyes. If multiple frames are displayed, the position of the orange frame changes. To cancel the Focus Check display Press the MENU button. Play the movie. Print See the Direct Print User Guide for details. Play Play You can use the. The actual position of the edited movie may differ slightly from editing the results viewed on the LCD monitor. The preedit data is left unchanged. No transition effect. The displayed image darkens and the next image gradually brightens until it is displayed. Press the button to have the previous image display from the left and the button to have the next image display from the right. Image settings for slide shows are based on the Digital Print Order Format DPOF standard. All Images Plays all images on a memory card in order. Date Plays images bearing a specified date in order. Plays the images in the selected category in My Category order. Up to 998 images can be selected. They will be played back in their order of selection. Select a playback method. Red eyes may not be automatically detected in some images or the results may not turn out as you intended.

<https://domoticaaplicada.com/images/bt-norstar-m7100n-manual.pdf>



Examples Faces near the screen edges or faces that appear extremely small, large, dark or bright in relation to the overall image. Although you can apply red eye correction any number of times to an image, the image quality will gradually deteriorate with each application. The following selection of My Colors effects is available. For details, see 114. Vivid Lighter Skin Tone Neutral Darker Skin Tone Sepia Vivid Blue. Although My Colors effects can be added any number of times to an image, the image quality will gradually deteriorate with each application and the intended colors may not be achieved. Record Starts recording. Pause Stops recording, playback. Play Plays back. Erase Erases. You cannot attach sound memos to movies. Sound memos for protected images cannot be erased. Record Starts recording. Pause Stops recording, playback. You can configure the protection settings for each Select image singly while viewing them. You can select a first and last image and protect all Select Range the images in the range. This also can be set in the index playback mode. When you press the button in shooting mode, it switches the camera to playback mode. Configures print settings for images corresponding Select by Date to the selected date. Refer to the Software Starter Guide for instructions on how to transfer images to your computer. The settings used on the camera comply with the DPOF standards. Turn off the camera and the TV. See My Camera allows you to customize the startup image and startup, operation, self-timer and shutter sounds. You can change

and register these settings, enabling you to customize the camera to suit your own tastes. Display flickers when shot This is not a camera malfunction under fluorescent lighting. flickering recorded in movies, but not in still images. A bar of light purplish red appears on the LCD monitor. Sometimes appears when This is a normal occurrence in shooting a bright subject, devices containing CCDs and does such as the sun or other.

If reformatting does not work, the memory card logic circuits may be damaged. Consult the nearest Canon Customer Support Help Desk. SD memory card or SDHC Slide the write protect tab upward memory card is write 208. Subject is too close, making Shoot with the subject within the the flash too strong. The following types of Although the recording time may not memory cards are used. You attempted to play back Computer images that cannot be images shot with another played back may play back if they are camera or images edited added to the camera using the with a computer. Battery will not charge. Memory card full Memory card is full of images and no more can be recorded or saved. The file name could not be created because there is an image with the same name as the folder that the camera is attempting to create, or the highest possible file number has already been reached. In addition, sound cannot be played back. Cannot register this image. You attempted to register an image recorded in a different camera or a movie as a startup image. If this message continues to display, contact your Canon Customer Support Help Desk as there may be a problem with the lens. Always ensure that the camera is operated correctly. The safety precautions noted on the following pages are intended to instruct you in the safe and correct operation of the camera and its accessories to prevent injuries or damage to yourself, other persons and equipment. Do not use substances containing alcohol, benzine, thinners or other flammable substances to clean or maintain the equipment. The battery should not be immersed in water or sea water. Do not attempt to disassemble, alter or apply heat to the battery. Exposure to the intense light produced by the flash may damage eyesight. In particular, remain at least one meter 39 inches away from infants when using the flash. Keep objects that are sensitive to magnetic fields such as credit cards away from the speaker of the camera.

<http://www.psstrecno.sk/wp-content/plugins/formcraft/file-upload/server/content/files/162716e2ca080c---brady-tls2200-manual-espa-ol.pdf>

Flash Do not operate the flash with dirt, dust or other items stuck to the surface of the flash. Icons Message Sufficient battery charge. Recharge the battery soon for extended use. blinking red Low battery charge. Recharge the battery. Change the Battery is fully depleted and the camera can no batteries longer operate. Turn the camera power off before connecting or disconnecting the AC adapter. Use the following procedures to affix the camera and HighPower Flash to the supporting bracket. To illuminate the subjects properly, install the flash so that it is up against the side of the camera and parallel with the camera's front panel. If dirt remains, contact the closest Canon Customer Support Help Desk as listed on the European Warranty System EWS Booklet. Subject to change without notice. DIGITAL IXUS 960 IS W Max. Exif Print is a standard for enhancing the communication between digital cameras and printers. Direct Print PictBridge compliant, and Canon Direct Print and Bubble Jet Direct compatible My Camera Settings Startup image, startup sound, operation sound, selftimer sound, and shutter sound. Actual results may vary according to the subject and shooting conditions. DPOF Print Order Print Style. AC Adapter Kit ACKDC30. Selecting Images. AE Lock. DPOF Transfer Order. AF Frame.55, AF Lock. Smooth Continuous Shooting. Sound Memo. Sound Recorder. Spot AE Point Frame.55, Stitch Assist. System Requirements. Only functions with settings that change with the shooting mode are listed here. Note Please use Adobe Reader 6.0 or later versions to browse the PDF file. Adobe, Acrobat, and Reader are trademarks or registered trademarks of Adobe Systems Incorporated in the United States of America and other countries. You may download and use the Content solely for your personal, noncommercial use and at your own risks.

Canon shall not be held liable for any damages whatsoever in connection with the Content, including, without limitation, indirect, consequential, exemplary or incidental damages. You shall also not and shall not let others reproduce, modify, reformat or create derivative works from the Content, in whole or in part. Tel 848 38200 466 Tel 848 38200 466. The comparison tables in this article list equivalent IXY Digital and PowerShot Digital ELPH model names. The cameras themselves are identical apart from the front fascia, according to the parts lists. The Canon model number on the bottom is consistent between marketing names. Images are recorded as JPEGs. Raw image files are not accessible without the use of third party firmware such as CHDK. Canon issued a recall in October 2006 adding these to their recall list. The damaged CCD displays purple or blueish, distorted or possibly no image at all. This problem can be temporarily overcome by removing both the main battery as well as the small internal battery. Canon has acknowledged this issue and formerly repaired free of charge. The reason given is its missing info about the video recording specifications and the PowerShot Digital ELPH 360 HS a successor to 340 HS model, which was also released in January 5th 2016, alongside 190 IS model. It has a 20.2 MP CMOS sensor with 12x optical zoom and 1080p FullHD video capabilities as opposed to ELPH 190IS model. Please update this article to reflect recent events or newly available information. March 2019 Contrary to the message, there may not actually be anything wrong with the memory card. By using this site, you agree to the Terms of Use and Privacy Policy. Using the online preview, you can quickly view the contents and go to the page where you will find the solution to your problem with Canon IXUS 960 IS. To start viewing the user manual Canon IXUS 960 IS on full screen, use the button Fullscreen.

However, if you do not want to take up too much of your disk space, you can always download it in the future from ManualsBase. The option to print the manual has also been provided, and you can use it by clicking the link above Print the manual. You do not have to print the entire manual Canon IXUS 960 IS but the selected pages only. paper. If you want to quickly view the content of pages found on the following pages of the manual, you can use them. Refer to them as necessary according to the flowchart below. Contents of This Guide Check the package contents Getting Started p. 7 Explains how to complete tasks ranging from charging batteries and installing memory cards to setting the date and time, shooting, playing and erasing images, and performing simple printing tasks. Learning More p. 37 Names camera components and provides more detailed instructions for shoot. If something is missing, please contact the retail outlet at which you purchased the product. Please note that Canon Inc., its subsidiaries and affiliates, and its distributors are not liable for any consequential damages arising from any malfunction of a camera or accessory, including memory cards, that results in the failure of an image to be recorded or to be recorded in a way that iAlign these symbols 2. Plug the battery charger CB2LX into a power outlet, or attach the power cord to the battery charger CB 2LXE and plug it into a power outlet. Battery charger model names and types vary by region. Charge Indicator On Charging lights orange For CB2LX For CB2LXE 3. Remove the battery after charging is complete. Charging takes approximately 2 hours 5 minutes. Charge Indic Ensure that the memory card is correctly oriented before inserting it in the camera. Inserting it Or if you use the separately sold AC Adapter Kit ACKDC30, the battery will charge in about four hours. It will charge even if the camera is turned off.

You can imprint the date Review Recorded images are displayed on the LCD monitor for approximately 2 seconds immediately after shooting. Shutter Button Button You can also use the following methods to continue displaying the image immediately after shooting so that you can check it. Keep the shutter button pressed fully. Press the button while the recorded image is displayed. Make sure the operation sound plays. You can shoot by pressing the. Canon Digital IXUS 980 IS Canon Digital IXUS 950 IS Canon Digital IXUS 970 IS Canon PowerShot G9 X Mark II Canon Digital IXUS 900 Ti Canon Digital IXUS 870 IS Canon PowerShot SX620 HS Canon Digital IXUS 100

IS Canon PowerShot S95 Canon PowerShot S110 Canon Digital IXUS 990 IS It can be calculated with the following formulaIts slightly higher Sensor resolution is used in pixel pitch, pixel area, and pixel density formula. For sake of simplicity, were going to calculate it in 3 stages.Its usually 1.33 43 or 1.5 32, but not always.Canon Digital IXUS 95 IS Canon PowerShot A650 IS Sony Cybershot DSCRX100 Vivitar ViviCam 8625 Canon IXUS 275 HS Canon IXUS 145 Nikon D610 Canon DIGITAL IXUS 750 Sony Alpha SLTA37 Fujifilm FinePix F100fd. Finished book size is A5 148 x 210mm. 236 pages long. Our reprints are high quality, printed on 80gsm superwhite Canon paper on a Canon office copier. The pages are then spiral bound with a clear acetate front cover and red card back cover, held together with a strong white wire. Your manual will lay flat when open and will last for as long as your camera, with a little bit of care. Manuals over 400 pages long may be supplied as more than one book.This camera is also known as USA PowerShot SD950 IS DIGITAL ELPH Japan IXY DIGITAL 2000 IS. EOS M og EOS Rserierne af spejllose fullframekameraer leverer samme styrke som et digitalt spejlreflekskamera i et kompakt kamera. Fa mere at vide om vores brug af cookies og rediger dine cookieindstillinger her.

Du accepterer vores brug af cookies pa din enhed ved at fortstte med at bruge vores webside eller ved at klikke pa Jeg accepterer. Det tager 1 minut og vil hjelpe os med at forbedre vores supportwebsted. Post your question here in this forum. Were committed to dealing with such abuse according to the laws in your country of residence. When you submit a report, well investigate it and take the appropriate action. Well get back to you only if we require additional details or have more information to share. Note that email addresses and full names are not considered private information. Please mention this; Therefore, avoid filling in personal details. Please enter your email address. Also known as the Digital ELPH SD950 IS, this is a 12 megapixelThe IXUS 960 IS featuresUnder the alltitanium surface, the CanonOther notable features includeWith a recommended price of 369,We spent a few weeks with theThe subtle curves of theBy law, all CanonAs ever though, this impeccableAs was the case last year,A couple of externalShutter delay is negligible, whileLocated on the faceplate are alsoThere are also some very small controlsThese include a familiarManual mode adds digital macro,In the same manual mode you canContinuous is on all theIn practice I found that it does make a noticeable difference, as shown in theYou dont notice that the camera is actually doing anything differentIn auto mode youre offered justThe red eye function is.The result was that IYou have to pressRival compact cameras have aTo the rightPress menu whenThe second controls the set upAbove the fourway controlAgain, all optionsNestling next to this. We delete comments that violate our policy, which we encourage you to read. Discussion threads can be closed at any time at our discretion. You can use it to view, edit and print images on a computer. In vendita su EBAY. For inquiries regarding Roxio MyDVD for Canon, please contact directly the customer. On average, the contents of a Canon service manual.

Service Mode. Canon DM MV600i DMMV630i DMMV600 DMMV590 digital camcorder. Canon DC201 DC210 DC211. Download Drivers, Software and ManualsTo access the content listed above and more including Firmware and FAQ s, please search for your product below or. Canon Tags. 0x0002, CanonFocalLength, , Canon FocalLength Tags. 0x0003, CanonFlashInfo no. 0x0004, CanonShotInfo, , Canon ShotInfo Tags. View and Download Canon IXUS 960 IS user manual online. IXUS 960 IS Digital Camera pdf manual download. Reload to refresh your session. Reload to refresh your session. Note Please use Adobe Reader 6.0 or later versions to browse the PDF file. Adobe, Acrobat, and Reader are trademarks or registered trademarks of Adobe Systems Incorporated in the United States of America and other countries. EOS M and EOS R Full Frame mirrorless ranges deliver the power of DSLR in the body of a compact camera. You can also view our Frequently Asked Questions FAQs and important announcements regarding your IXUS product. You may download and use the Content solely for your personal, noncommercial use and at your own risks. Canon shall not be held liable for any damages whatsoever in connection with the Content, including, without limitation, indirect, consequential, exemplary or incidental damages. You shall also not and shall not

let others reproduce, modify, reformat or create derivative works from the Content, in whole or in part.

<http://www.bosport.be/newsletter/bosch-hbn43m561b-manual>